

SERVICEBOX

8510/8615



- Box weight: 103 kg
- Dimensions of the box: 80x60x43 cm

Parts included in the box:

| | |
|---------------------------|---|
| Twistlock Assembly | 4x Twistlock kit 8x Seal ring 8x O-ring 4x Ball joint 4x Seated pin 4x Nut 4x Indicator arm 4x Compression spring 4x Compression spring 4x Bracket 4x Tie rod 4x Indicator arm |
| Wear pads | 20x Wear pad - (18x for 45ft spreader) 2x Wear pad (45ft spreader only) 4x Nylon pad 2x Wear pad - Indication arrangement 4x Wear pad - Extension cylinder |
| Buffers | 8x Buffer - Flipper arm 8x Buffer - Folding cylinder 4x Nut - Folding cylinder |
| Feet | 4x Bushing 4x Shim 8x Roll pin 4x Nut |
| Filters | 1x Filter kit |
| Additional Items | 4x Proximity switch 2x Proximity switch - In foot 1x Seal kit - Extension cylinder 1x Seal kit - Flipper cylinder 1x Seal kit - Twistlock cylinder 2x Seal kit - Folding/clamping cylinder |
| Service Manual | 1x Service manual |

The idea of ELME Servicebox is to facilitate service job and preventive maintenance of the spreader by boxing up selected genuine parts. The box includes all the parts we consider needed to be replaced at service.

Purchasing the servicebox directly together with an equipped machine ensures that the ELME spreader continues to hold a high level in terms of its dependability and reliability. Additionally it ensures low downtime and is more economical than buying all the parts individually. Even better is that it keeps the spreader in good condition by regular service checkups!

Servicebox 8510/8615 is valid for all standard models delivered from the launch in year 2017.

ELME Servicebox is available for many of our spreader models – both empty and laden truck spreaders as well as crane spreaders.

For more information about available models, please visit the ELME Servicebox page at www.elme.com

ELME GENUINE PARTS - PERFORMANCE, RELIABILITY AND SAFETY

An ELME spreader consists of more than 3,000 parts – all carefully designed and built to provide the highest possible level of **performance**. Elme Genuine Parts, our range of approved spare parts and accessories, are 100 % made for your ELME spreader – with the exact right qualities, dimensions and features – to secure the **reliability** and **safety** of your product. By using ELME genuine parts, you always get parts you can rely on and true peace of mind. If you are using non-genuine parts, you put weak links into a strong, perfectly designed chain of interactive components.

On a number of our spare parts we expand **safety** and traceability with a tooled product labeling, everything to improve the certainty of using genuine parts. Another example of this process is our twistlock certificate. This document ensures the origin and quality of the twistlocks and certifies that the twistlocks are tested.

Every single part of an ELME spreader is built at our plant in Älmhult, Sweden. And that's the way it's been since 1974. All the work is carried out here - from design and product development to manufacturing, assembling and testing. This unique approach lets us have 100 % control over the production and the final quality of our products. It's our way to ensure the **performance**, **reliability** and **safety**.



For more information and Servicebox manual, please visit www.elme.com

HEAD QUARTER AND PRODUCTION ELME Spreader AB

Phone +46 476 558 00
Email sales@elme.com
Website www.elme.com

SALES AND SPARE PARTS ELME Spreader Trading (Shanghai) Co., Ltd

Phone +86 21 5169 8922
Email sales.cn@elme.com

SPARE PARTS ELME Americas Inc.

Phone +1 731 588 02 20
Email sales.us@elme.com